



A few tips for using the Gas fire:

- ✓ Open the stainless steel frame always with clean hands!
- ✓ On the left site below in the frame is a flap. Behind this flap is the gas tab. Close this tab <u>only</u> in case of emergency (push and turn to the right)!
- ✓ When the pilot flame extinguished, please wait <u>5 minutes</u> before lighting-up again.
- ✓ To light the fire, first open the stainless steel frame **carefully** by pulling it at the right side.


Control Panel

1. Off Position

2. Pilot flame

To light up the Pilot flame from the <<OFF>> position: Push the button (see image) en quickly turn to the left side to the Pilot flame. Repeat this until the Pilot flame burns. When the flame burns, hold the button 10 till 15 seconds and afterwards release it slowly. The pilot flame will stay on.

3. Raise and Reduce the flame

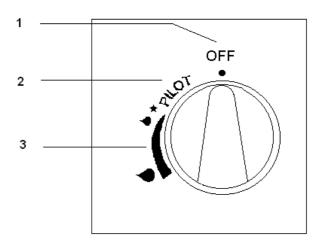

CAUTION: the outside of the gas fire heats up during use.