




Induction hob manual

Make sure there is always a pan on the hob when you want to turn the hob on.

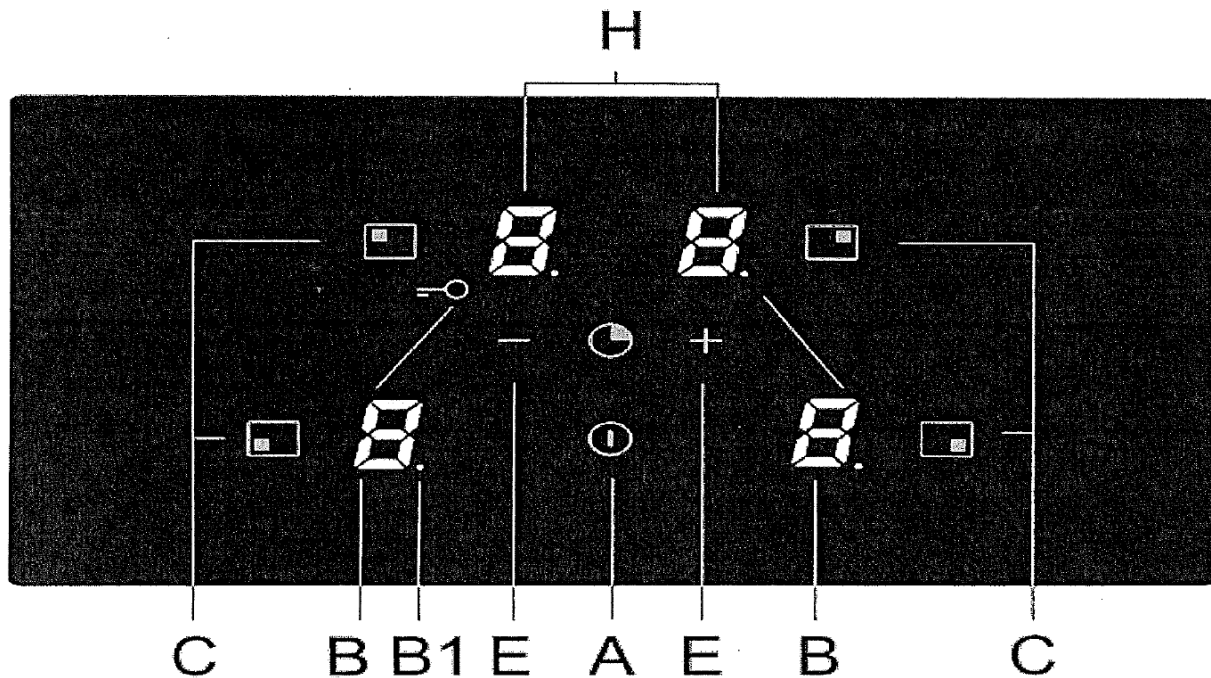

- A. On / Off button
- B. Power / residual heat indication
- B1. Decimal point - with activated timer function
- C. Cooking zone selection key
- E. Power button
- H. Timer display

To activate the child lock:

- Press the on / off button (A). The hob is in stand-by mode. The cooking zone displays show "0".
- Press button (C) and button (E) simultaneously for at least three seconds until you hear a beep. The displays will show "L" for a few seconds. The child lock is now activated.

To deactivate the child lock:

- Press the on / off button (A). the displays will show "L" for a few seconds.
- Press button (C) and button (E) simultaneously for at least three seconds. "0" appears in the cooking zone displays. The child lock is switched off.